

TECHNICAL DATA SHEET

FFP3 Dust Mask – Tri-Fold



DESCRIPTION

This mask can be used as personal protective equipment (PPE) to EN149:2001 + A1:2009, and is suitable for protection against hazardous toxic dust. These masks also offer protection against water and oil based fumes. Exhalation valves help to reduce heat and condensation build up in the mask. The FFP3 is available in valved version only. These masks are lightweight and comfortable with a soft foam nose seal, and adjustable nose clip that Molds to the user's face to enhance compatibility with eyewear and reduce fogging. Due to current demand, the masks may vary slightly from the image on our website.



TECHNICAL SPECIFICATION

Quantity	Box of 10 masks
Protection Level	FFP3 NR
Test Standard	EN 149:2001 A1:2009
Sterility	Non-sterile
APF (assigned protection factor)	20 x

FEATURES

- Mouldable Contoured fit Nose Bridge
- Soft Foam Nose Closure
- Adjustable Elastic Straps
- Comfort Face Seat
- Comfortable Valve
- Reduced heat build up
- Single use only
- High efficiency
- One size

TECHNICAL DATA SHEET



FFP3 Dust Mask – Tri-Fold

How to store:

Keep respirators in the display box away from direct sunlight or contaminants until use. Ambient storage conditions should not exceed 25°C and 50% relative humidity.

This product is intended for single use only. No maintenance is necessary. Discard respirator after use or if damaged in any way.

This product does NOT protect the wearer against glasses, vapours and solvents (e.g. from paint spraying operations) and should not be used in atmospheres containing less than 19.5% oxygen.

Leave the work area immediately if a) breathing becomes difficult or b) dizziness or other distress occurs.

Do not use when concentrations of contaminations are immediately dangerous to health or life.

Facial hair, beards and certain facial characteristics may reduce the effectiveness of this respirator.

Never alter or modify this respirator in any way (except as indicated in the instructions)

The length of time this respirator can be used depends on contaminants present but should exceed one shift. The respirator should be placed sooner if breathing becomes difficult or if the user notes any irritation, taste or smell.

Failure to follow all instructions and limitations on the use of this product could reduce the efficiency of the respirator and result in serious damage to health or death. Unless fitted according to instructions, the respirator will not provide the expected level of protection.

NOTE:


A properly selected respirator is essential to protect your health. Before using this respirator consult a suitably qualified safety professional to determine the suitability of the product for your intended use.

TECHNICAL DATA SHEET

FFP3 Dust Mask -Tri-Fold



STEP 1:

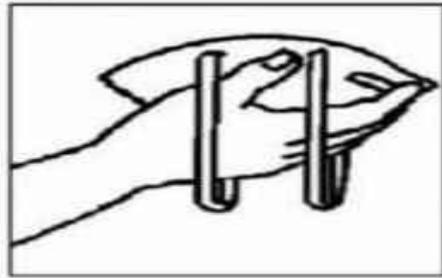

STEP 2:



STEP 3:



STEP 4:



Instructions for use:

Respiratory protection is only effective if correctly selected, fitted and worn for the complete period of exposure to hazards.

Read ALL instructions and warnings carefully before use.

1. Hold the mask in hand with the nose-piece up. Allow headband to hang freely and gently open mask.
2. Position the mask under the chin covering mouth and nose and pull the headband over the head and position behind head.
3. To check fit, cup both hands over the mask and exhale vigorously. If air leaks around the edge, reposition the headband for better fit. Reset the seal and repeat the procedure until the mask is sealed properly.