

DATA SHEET

FFP3 Dust Masks



Product Description

Traditional semi-rigid cup shape with bonded **mesh** to improve shape retention. Light and comfortable with enhanced nose & face seal and exhalation valve to reduce heat build up and condensation. Extra wide adjustable elastic straps. Colour coded box for easy identification of protection levels. Maintenance free, designed for single use only (NR -Not Reusable). Metal free.

This mask meets the requirements of **EN149:2001 FFP3** and offers protection against non-toxic and low-to-average toxicity and high toxicity solid and liquid aerosols (e.g. oil-mists) in concentrations up to 50 x MAC/OEL/TLV or 20 x APF.


- **Storage:** Keep respirators in the display box away from direct sunlight or contaminants until use. Ambient storage conditions should not exceed 25°C and 50% Relative Humidity.
- This product is intended for **single use only**. No maintenance is necessary. Discard respirator after use or if damaged in any way.
- This product does NOT protect the wearer against gases, vapours and solvents (e.g. from paint spraying operations) and should not be used in atmospheres containing less than 19.5% oxygen.
- Leave the work area immediately if a) breathing becomes difficult or b) dizziness or other distress occurs.
- Do not use when concentrations of contaminants are immediately dangerous to health or life.
- Facial hair, beards and certain facial characteristics may reduce the effectiveness of this respirator.
- Never alter or modify this respirator in any way (except as indicated in the instructions)
- The length of time this respirator can be used depends on contaminants present but should not exceed one shift. The respirator should be replaced sooner if breathing becomes difficult or if the user notes any irritation, taste or smell.
- Failure to follow all instructions and limitations on the use of this product could reduce the efficiency of the respirator and result in serious damage to health or death. Unless fitted according to instructions, the respirator will not provide the expected level of protection.

RETAIL PACKAGING AVAILABLE: No
AVAILABLE SIZES: ONE SIZE
PACKAGING: Per Box: 10 masks
 Per Case : 200 masks (20 boxes of 10 masks)
PROTECTION LEVEL: Red, FFP3 NR

NOTE: A properly selected respirator is essential to protect your health. Before using this respirator consult a suitably qualified Safety Professional to determine the suitability of the product for your intended use.

FFP3 Dust Masks

STEP 1:

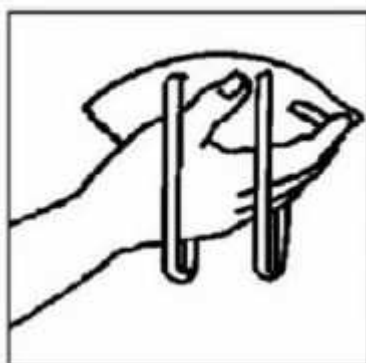


STEP 2:



STEP 3:



STEP 4:

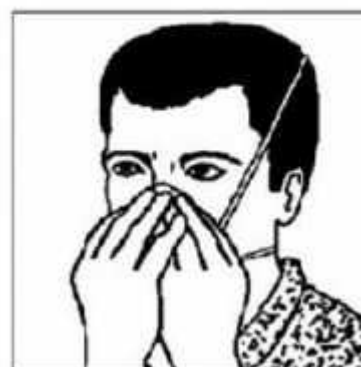**Instructions for Use:**

Respiratory protection is only effective if correctly selected, fitted and worn for the complete period of exposure to hazards

- Read ALL instructions and warnings carefully before use.

1. Hold the mask in hand with the nose-piece up. Allow headband to hang freely and gently open mask.
2. Position the mask under the chin covering mouth and nose and pull the headband over the head and position behind head.
3. To check fit, cup both hands over the mask and exhale vigorously. If air leaks around the edge, reposition the headband for better fit. Retest the seal and repeat the procedure until the mask is sealed properly.